



AP Mode Instructions

Brim Chargers

A step by step user guide for your Brim Charger.

AP Mode Guide

 
OVERVIEW

Chargers installed prior to Brim's 2024 security update may require a Certificate update.

Chargers connected for 10 minutes will automatically update, but require connecting to our WS server.



Step 1: Wi-Fi Connection

- 1 Make sure the Wi-Fi of Phone is enabled
- 2 Use the phone to connect to the HotSpot of the charger. The name of the HotSpot begins with SN1005.... which is the same as the serial number of the charger.
- 3 Enter the default Wi-Fi password which can be found on the user manual, to connect the HotSpot.

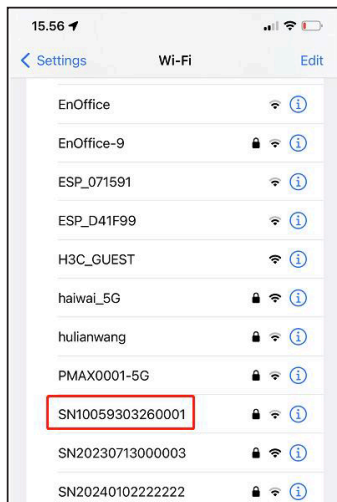




Step 2: Login AP Page

  - 1 Open a browser on the Phone, such as Chrome, Safari, etc
- 2 In the address bar, input the address 192.168.4.1
- 3 Input the pin code of the charger to login the AP page, this can be found together with your WiFi Password

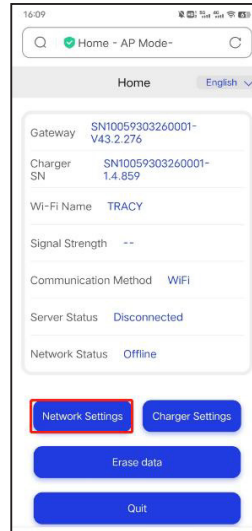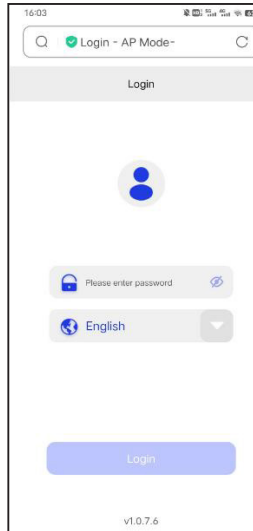


Step 3: Setup

   - ① After logging into the AP page, click on Network Settings where you can set up your network and URL of the platform.
- ② Input WI-Fi password to let the charger connect to network.
Change the URL to `ws://backend.prod.mybrim.io:80`

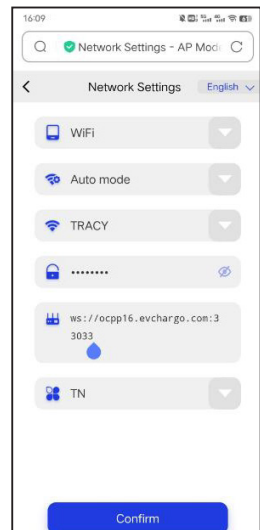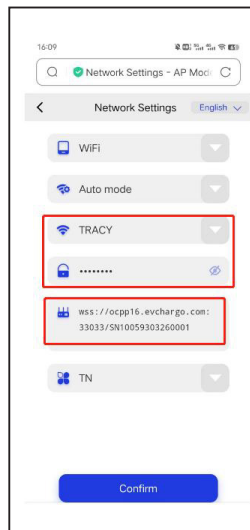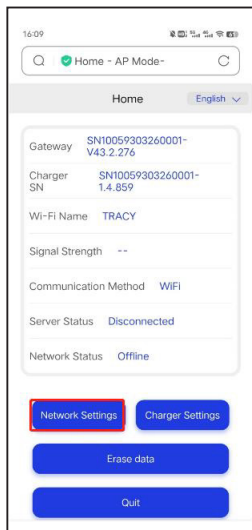

Step 3: Setup

 - ② After changing the URL, you will be forced to log out. Please re-login and check the server status and network status. If they show Connected and Online, leave it for a minimum 10 minutes, and the certificate will be updated automatically.

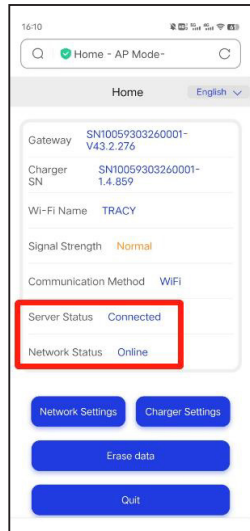



plugmein@fulltothebrim.com

+44 020 7097 5911

www.fulltothebrim.com